

Montageanweisung „QuickStart” (Seite 2-3)

“QuickStart” Assembly Instructions (Page 4-5)

Achtung:

Lesen Sie die Montageanweisung gründlich durch und befolgen Sie unbedingt die Sicherheitsvorschriften in der Betriebsanweisung der Motorsense!

Note:

Read these assembly instructions completely and be sure to follow the safety instructions in the operating manual supplied with the Brushcutter!



Das „QuickStart-Set“ beinhaltet folgende Teile:




- 1 Starter
- 2 Starterrad
- 3 Drei Schrauben (5x16)
- 4 Starterflansch
- 5 Dämpfungsstück
- 6 Aufkleber




ACHTUNG: Bei allen Arbeiten an der Motorsense unbedingt Motor ausschalten, Kerzenstecker abziehen und Schutzhandschuhe tragen!

ACHTUNG: Motorsense darf erst nach komplettem Zusammenbau und Prüfung gestartet werden!

Demontage des Serien-Starters

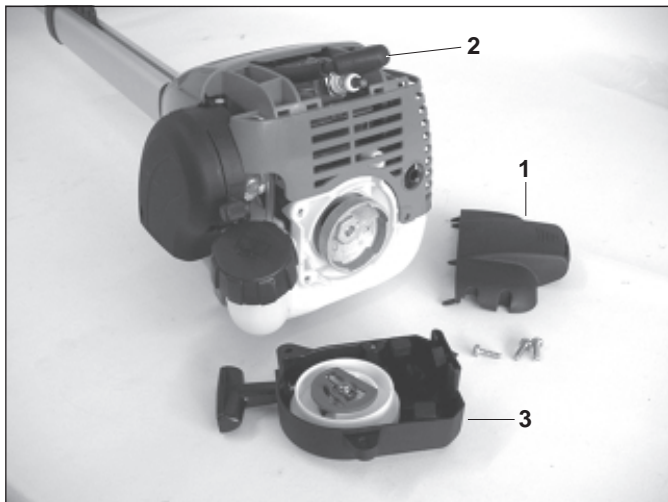


- Zündkappe (1) abnehmen und Kerzenstecker (2) abziehen.
- Serienmäßigen Starter (3) abschrauben.

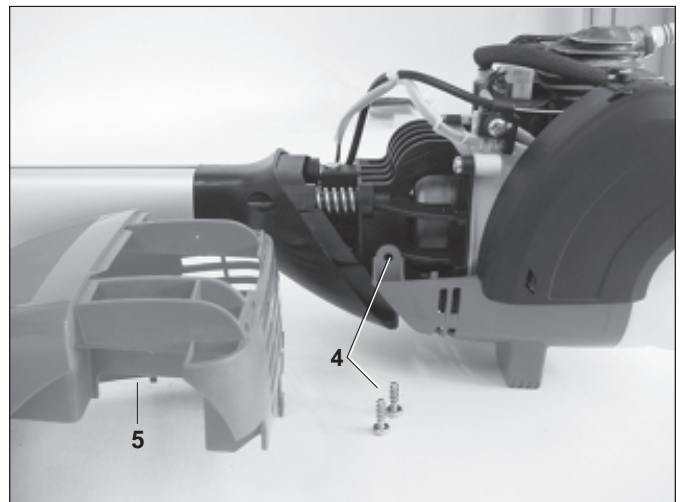


- Schraube (4) auf jeder Seite des Gerätes herausdrehen und Haube (5) abnehmen.

Montage des „QuickStarters“

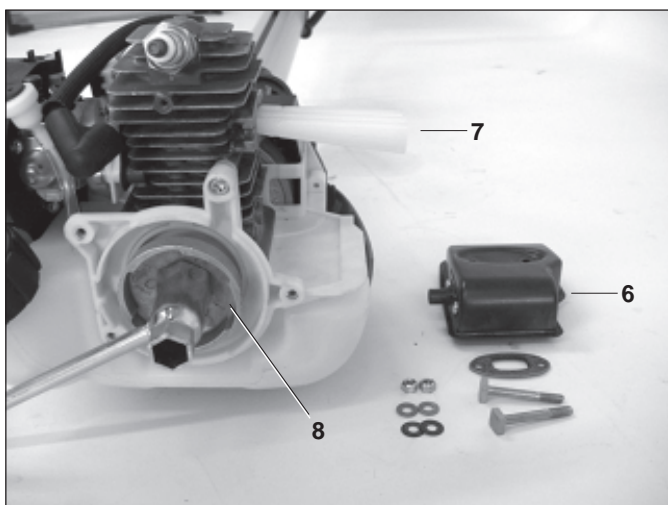


- Schalldämpfer (6) abschrauben.
- Kolbenstopkeil (7) in den Auslasskanal des Zylinders stecken.
- Anwurfrolle (8) mit Kerzenschlüssel **gegen den Uhrzeigersinn** losdrehen und abnehmen.

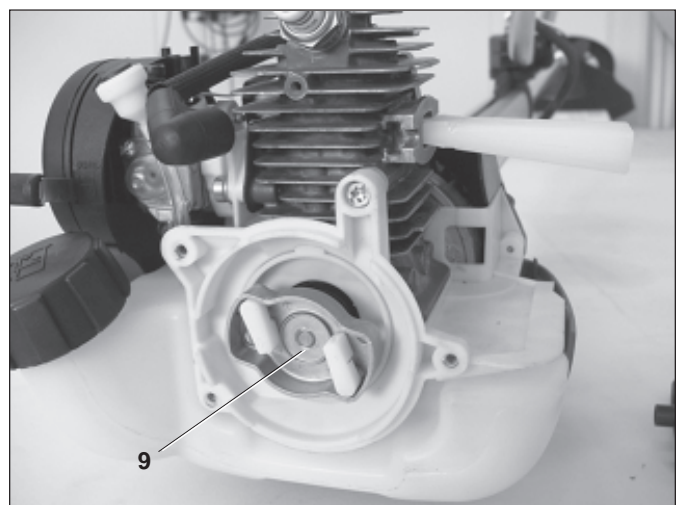

- Gewinde des Starterrades (9) mit "Loctite 243" (mittelfest, blau) bestreichen.
- Starterrad (9) **im Uhrzeigersinn** aufschrauben und von Hand gut festdrehen (3,5 Nm).
- Kolbenstopkeil entfernen und Schalldämpfer und Haube wieder montieren. Anzugsmoment Schalldämpfer (6 Nm).



- Dämpfungsstück (10) in Starterflansch (11) einsetzen.

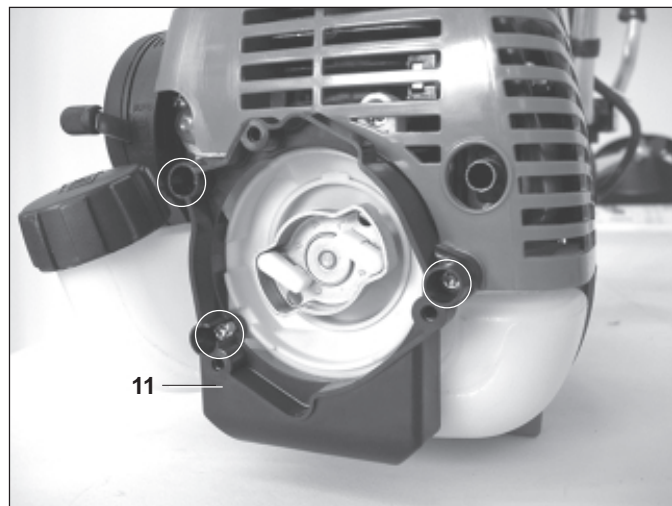

- Starterflansch (11) mit den drei Schrauben des alten Starters am Gerät befestigen (siehe Kreis).



- Starter (12) mit den drei Schrauben aus dem kpl. Set am Starterflansch befestigen.
- Aufkleber (13) anbringen.



Information

Mit dem "QuickStarter" kann die Motorsense komfortabel ohne Kraftaufwand gestartet werden. Die eingebaute Federkassette unterstützt den Startvorgang erheblich.

Zum Startvorgang lesen Sie die Betriebsanweisung der Motorsense. Unbedingt Sicherheitshinweise befolgen!



Wichtig: Bitte informieren Sie Ihren Kunden noch einmal darüber, Kinder vom Gerät fernzuhalten. Der Startvorgang kann nach Anbau des QuickStarters ohne weiteres von Kindern durchgeführt werden.

The “QuickStart-Set” contains the following parts:




- 1 Starter
- 2 Starter wheel
- 3 Three screws (5x16)
- 4 Starter flange
- 5 Shock absorber
- 6 Sticker




CAUTION: Before doing any work on the brushcutter, turn off the engine and remove the spark plug cap! Always wear protective gloves.

CAUTION: Do not turn on the brushcutter until it has been completely assembled and checked!

Removing the factory-installed starter

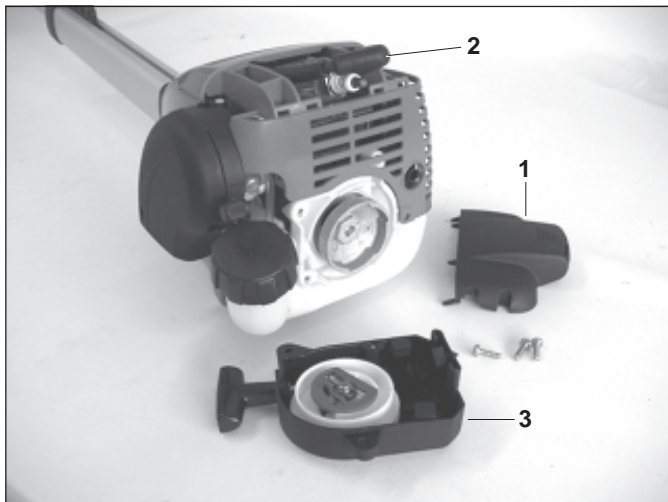


- Remove the ignition cover (1) and pull off the spark plug cap (2).
- Unscrew the factory-installed starter (3).

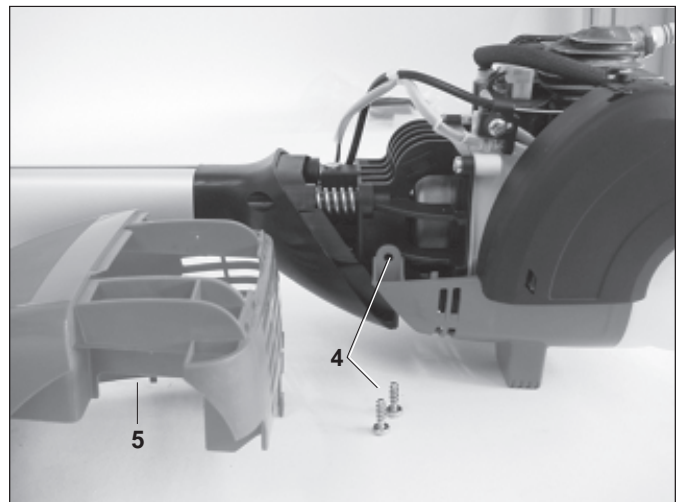


- Unscrew the screws (4) on either side of the unit and remove the hood (5).

Installing the “QuickStarter”

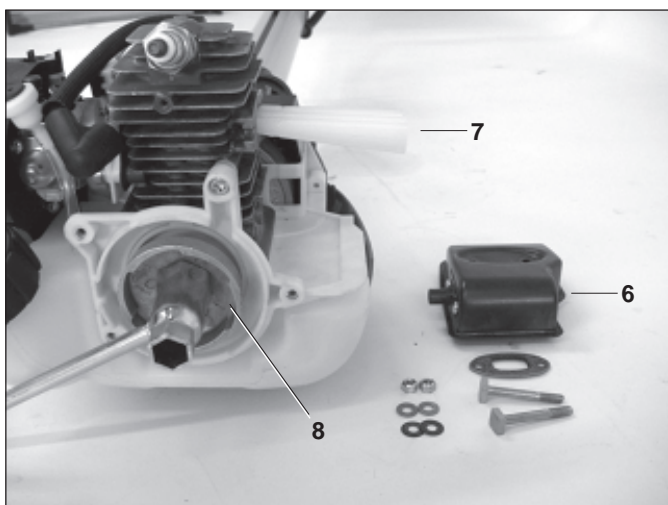


- Unscrew the muffer (6).
- Insert a piston stop wedge (7) in the cylinder exhaust channel.
- Using a spark plug wrench, turn the starter roller (8) **counter-clockwise** and remove it.

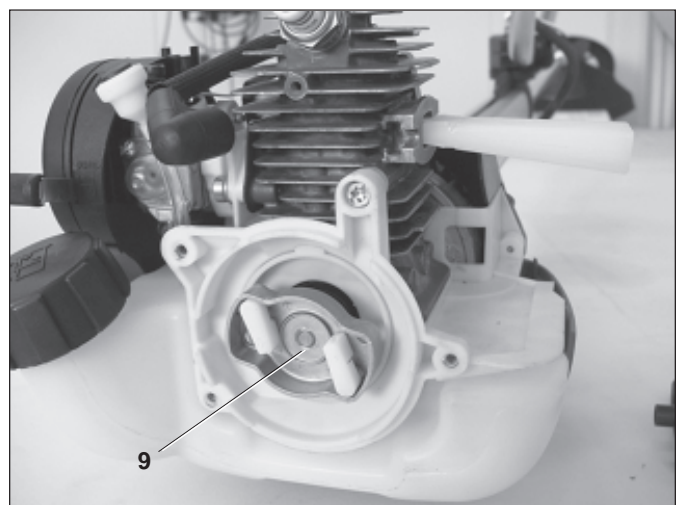


- Apply Loctite 243 (medium, blue) to thread of the starter wheel (9).
- Screw on the starter wheel (9) **clockwise** and hand-tighten it (tightening torque 3.5 Nm).
- Remove the piston stop wedge and put the muffer and hood back on. Tighten the muffer to a torque of 6 Nm.



- Position the shock absorber (10) in the starter flange (11).

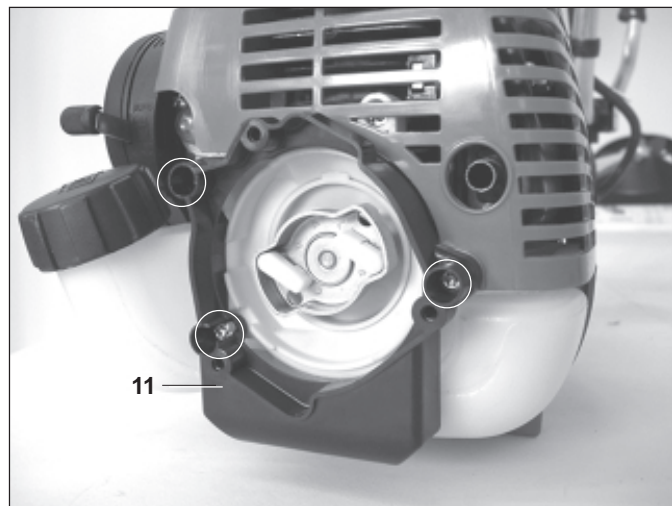

- Attach the starter flange (11) to the unit with the three screws from the old starter (see circle).

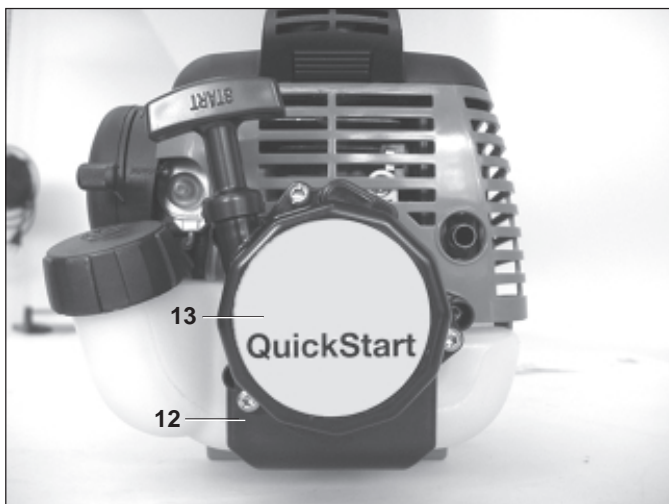

- Attach the starter (12) to the starter flange using the three screws from the set.
- Apply the sticker (13).



Information

With the "QuickStarter" installed, the brushcutter can be started easily with little effort. The built-in spring pack greatly assists starting.

To start, follow the brushcutter operating manual. Always follow the safety instructions!



Important: Please remind your customers to keep the brushcutter out of reach of children. With the QuickStarter installed, a child can easily start the brushcutter.



Postfach 70 04 20
D-22004 Hamburg
Germany

Änderungen vorbehalten
Specifications subject to
change without notice

Form: 995 711 176 (5.03 D, GB)